# CS547A CONDUCTIVITY AND TEMPERATURE PROBE AND A547 INTERFACE INSTRUCTION MANUAL

**REVISION: 8/01** 

COPYRIGHT (c) 1994-2001 CAMPBELL SCIENTIFIC, INC.

# Warranty and Assistance

The CS547A CONDUCTIVITY AND TEMPERATURE PROBE AND A547 INTERFACE are warranted by CAMPBELL SCIENTIFIC, INC. to be free from defects in materials and workmanship under normal use and service for twelve (12) months from date of shipment unless specified otherwise. Batteries have no warranty. CAMPBELL SCIENTIFIC, INC.'s obligation under this warranty is limited to repairing or replacing (at CAMPBELL SCIENTIFIC, INC.'s option) defective products. The customer shall assume all costs of removing, reinstalling, and shipping defective products to CAMPBELL SCIENTIFIC, INC. CAMPBELL SCIENTIFIC, INC. will return such products by surface carrier prepaid. This warranty shall not apply to any CAMPBELL SCIENTIFIC, INC. products which have been subjected to modification, misuse, neglect, accidents of nature, or shipping damage. This warranty is in lieu of all other warranties, expressed or implied, including warranties of merchantability or fitness for a particular purpose. CAMPBELL SCIENTIFIC, INC. is not liable for special, indirect, incidental, or consequential damages.

Products may not be returned without prior authorization. To obtain a Returned Materials Authorization (RMA), contact CAMPBELL SCIENTIFIC, INC., phone (435) 753-2342. After an applications engineer determines the nature of the problem, an RMA number will be issued. Please write this number clearly on the outside of the shipping container. CAMPBELL SCIENTIFIC's shipping address is:

CAMPBELL SCIENTIFIC, INC.

RMA#\_\_\_\_ 815 West 1800 North Logan, Utah 84321-1784

CAMPBELL SCIENTIFIC, INC. does not accept collect calls.

Non-warranty products returned for repair should be accompanied by a purchase order to cover the repair.



# CAMPBELL SCIENTIFIC, INC.

815 W. 1800 N. Logan, UT 84321-1784 USA Phone (435) 753-2342

Phone (435) 753-2342 FAX (435) 750-9540 www.campbellsci.com Campbell Scientific Canada Corp. 11564 -149th Street Edmonton, Alberta T5M 1W7 CANADA Phone (780) 454-2505 FAX (780) 454-2655 Campbell Scientific Ltd.
Campbell Park
80 Hathern Road
Shepshed, Loughborough
LE12 9GX, U.K.
Phone +44 (0) 1509 601141
FAX +44 (0) 1509 601091

# CS547A Probe and A547 Interface Table of Contents

1.	Overview	1
	1.1 EC Sensor	
2.	Specifications	2
	<ul><li>2.1 CS547A Probe</li><li>2.2 A547 Interface</li><li>2.3 Temperature Sensor</li></ul>	2
3.	Installation	3
	3.1 Site Selection	3
4.	Wiring	3
5.	Programming	4
	5.1 Programming Overview	
6.	Calibration	10
	<ul><li>6.1 Conversion Factors.</li><li>6.2 Typical Ranges.</li><li>6.3 Factory Calibration.</li><li>6.4 Field Calibration.</li></ul>	10 10
7.	Maintenance	12
8.	Analysis of Errors	13
	8.1 EC Measurement Error	
9.	Deriving a Temperature Compensation Coefficient	15

10.	Instruction 11 Details	16
11.	Electrically Noisy Environments	17
12.	Long Lead Lengths Temperature	17
13.	CS547A Schematic	18

# CS547A Conductivity and Temperature Probe and A547 Interface

### 1. Overview

The CS547A conductivity and temperature probe, and A547 interface are designed for measuring the electrical conductivity, dissolved solids, and temperature of fresh water with Campbell Scientific dataloggers. They require the use of AC excitation, so they can be used with the CR510, CR10(X), 21X, CR23X, and CR7 dataloggers but not with the BDR301 or BDR320. Use with multiplexers is possible.

Electrical conductivity (EC) of a solution is a simple physical property, but measurements can be difficult to interpret. This manual instructs the user how to make EC measurements with the CS547A. Accuracy specifications apply to measurements of EC in water containing KCl, Na<sub>2</sub>SO<sub>4</sub>, NaHCO<sub>3</sub>, and/or NaCl, which are typical calibration compounds, and to EC not yet compensated for temperature effects.

Statements made on methods of temperature compensation or estimating dissolved solids are included to introduce common ways of refining and interpreting data, but are not definitive. Authoritative sources to consult include the <u>USGS Water-Supply Paper 1473</u>, <u>The pH and Conductivity Handbook</u> published by OMEGA Engineering, physical chemistry texts, and other sources.

#### 1.1 EC Sensor

The EC sensor consists of three stainless steel rings mounted in an epoxy tube as shown in Figure 4-1. Resistance of water in the tube is measured by excitation of the center electrode with positive and negative voltage.

This electrode configuration eliminates the ground looping problems associated with sensors in electrical contact with earth ground.

Temperature is measured with a thermistor in a three wire half bridge configuration.

#### 1.2 A547 Interface

The interface contains the completion resistors and blocking capacitors. The interface should be kept in a non-condensing environment that is maintained within the temperature range of the unit.

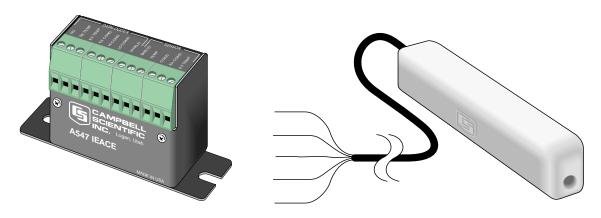


FIGURE 1-1. A547 Interface and CS547A Conductivity and Temperature Probe

# 2. Specifications

#### 2.1 CS547A Probe

Construction	The probe housing is epoxy

**Size** — **L** x **W** x **H** 3.5 inches (89 mm) x 1 inch (25.4mm) x 0.75 inch (19

mm)

**Maximum Cable** 

Length

1000 ft. The sensor must be ordered with desired length

as cable cannot be added to existing probes.

**Depth Rating** Maximum 1000 feet

**pH Range** Solution pH of less than 3.0 or greater than 9.0 may damage

the stainless steel housing.

**Electrodes** Passivated 316 SS with DC isolation capacitors.

**Cell Constant** Individually calibrated. The cell constant (K<sub>c</sub>) is found

on a label near the termination of the cable.

**Temp. Range of Use**  $0^{\circ}$  to  $50^{\circ}$ C.

EC Range Approx. 0.005 to 7.0 mS cm<sup>-1</sup>.

**Accuracy** in KCl and Na<sub>2</sub>SO<sub>4</sub>, NaHCO<sub>3</sub>, and NaCl standards at

25°C:

 $\pm 5\%$  of reading 0.44 to 7.0 mS cm<sup>-1</sup>.  $\pm 10\%$  of reading 0.005 to 0.44 mS cm<sup>-1</sup>.

#### 2.2 A547 Interface

**Size** Dimensions: 2.5" x .875" x 1.750

Weight: 6 oz.

**Temperature Rating** -15°C to +50°C

### 2.3 Temperature Sensor

**Thermistor** Betatherm 100K6A1.

**Range** 0°C to 50°C.

**Accuracy** Error  $\pm 0.4$ °C (See Section 8.2).

## 3. Installation

#### CAUTION

Rapid heating and cooling of the probe, such as leaving it in the sun and then submersing it in a cold stream, may cause irreparable damage.

#### 3.1 Site Selection

The EC sensor measures the EC of water inside the hole running through the sensor, so detection of rapid changes in EC requires that the probe be flushed continuously. This is easy to accommodate in a flowing stream by simply orienting the sensor parallel to the direction of flow. In stilling wells and ground wells, however, diffusion rate of ions limits the response time.

## 3.2 Mounting

The housing and sensor cable are made of water impervious, durable materials. Care should be taken, however, to mount the probe where contact with abrasives and moving objects will be avoided. Strain on cables can be minimized by using a split mesh strain relief sleeve on the cable, which is recommended for cables over 100 ft. The strain relief sleeve is available from Campbell Scientific as part number 7421.

The A547 is usually mounted in the datalogger enclosure.

# 4. Wiring

#### **WARNING**

The excitation channel used for EC must be separate from the one used for temperature or measurement errors will result.

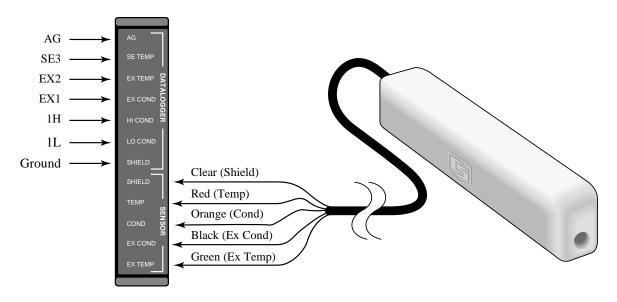


FIGURE 4-1. CS547A Wiring Diagram for Example Below

# 5. Programming

### 5.1 Programming Overview

Typical datalogger programs to measure the CS547A consist of four parts:

- 1. Measurement of EC and temperature
- 2. Correction of ionization errors in EC measurements
- 3. Correction of temperature errors in EC measurements
- 4. Output processing

All example programs may require modification by the user to fit the specific application's wiring and programming needs. All example programs in this manual are for the CR10(X) and assume that datalogger wire connections are as follows: the LO COND lead is connected to 1L, the HI COND to 1H, the EX COND to EX1, the EX TEMP to EX2, and the SE TEMP to SE3.

## 5.2 Measurement Programming

**EC**: Results from Instructions 5 or 6 (chosen automatically as part of the autoranging feature of the following program segment) are processed with Instruction P59 to produce the resistance across the electrodes:

#### **Input Location Labels**

Definitions for the following program:

Rs Solution resistance

Rp Resistance of leads/cable and blocking caps
Ct Solution EC with no temp. correction

C25mScm\_1 EC corrected for temperature

```
*Table 1 Program
 01: 5
               Execution Interval (seconds)
;Make a preliminary measurement of resistance for autoranging.
1: Full Bridge (P6)
 1: 1
               Reps
 2: 15
               ±2500 mV Fast Range
               DIFF Channel
 3:
     1
 4:
     1
               Excite all reps w/Exchan 1
               mV Excitation
 5: 2500
 6: 1
               Loc [Rs
               Mult
 7: -.001
 8: 1
               Offset
2: BR Transform Rf [X/(1-X)] (P59)
 1: 1
               Reps
 2:
     1
               Loc [Rs
               Multiplier (Rf)
 3: 1
;Test the initial measurement to make a more accurate measurement.
3: CASE (P93)
               Case Loc [ Rs
 1: 1
                                ]
     4: If Case Location < F (P83)
       1: 1.8
       2: 30
                    Then Do
           5: AC Half Bridge (P5)
             1: 1
                          Reps
             2: 15
                          ±2500 mV Fast Range
                2
                          SE Channel
             3:
                          Excite all reps w/Exchan 1
             4:
                1
             5: 2500
                          mV Excitation
                          Loc [Rs
             6: 1
             7: 1.0
                          Mult
                          Offset
             8: 0.0
           6: BR Transform Rf[X/(1-X)] (P59)
             1: 1
                          Reps
             2: 1
                          Loc [ Rs
             3: 1
                          Multiplier (Rf)
     7: End (P95)
     8: If Case Location < F (P83)
       1: 9.25
       2: 30
                    Then Do
                                                                                (cont.)
```

```
9: Full Bridge (P6)
             1: 1
                          Reps
             2: 15
                          ±2500 mV Fast Range
             3: 1
                          DIFF Channel
             4: 1
                          Excite all reps w/Exchan 1
             5: 2500
                          mV Excitation
             6:
                          Loc [Rs
                1
             7:
               -.001
                          Mult
                          Offset
             8:
                1
           10: BR Transform Rf[X/(1-X)] (P59)
             1: 1
                          Reps
             2: 1
                          Loc [Rs
                          Multiplier (Rf)
             3: 1
     11: End (P95)
     12: If Case Location < F (P83)
       1: 280
                    F
       2: 30
                    Then Do
           13: Full Bridge (P6)
             1: 1
                          Reps
             2:
                14
                          ±250 mV Fast Range
             3: 1
                          DIFF Channel
             4: 1
                          Excite all reps w/Exchan 1
             5: 2500
                          mV Excitation
             6: 1
                          Loc [Rs
             7:
                -.001
                          Mult
                          Offset
             8:
           14: BR Transform Rf[X/(1-X)] (P59)
             1: 1
                          Reps
             2: 1
                          Loc [Rs
                          Multiplier (Rf)
             3:
                1
     15: End (P95)
16: End (P95)
;Subtract resistance errors (Rp) caused by the blocking capacitors
;(0.005Kohm) and the cable length (0.000032kohm/ft). Enter cable lead
;length in nnn below.
17: Z=F (P30)
 1: nnn
                                             Enter cable length in feet.
 2: 00
              Exponent of 10
              Z Loc [ Rp
 3: 5
                             1
18: Z=X*F (P37)
 1: 5
              X Loc [ Rp
                             ]
 2: .00032
 3: 5
              Z Loc [Rp
                             ]
                                                                                (cont.)
```

```
19: Z=X*F (P37)
X Loc [ Rp
                               1
  2:
    -.1
  3: 5
                Z Loc [ Rp
                              ]
20: Z=X+F (P34)
               X Loc [ Rp
  1: 5
                              ]
 2:
     -.005
               Z Loc [Rp
  3:
     5
                              ]
21: Z=X+Y (P33)
  1: 1
                X Loc [ Rs
 2: 5
                Y Loc [ Rp
                               ]
               Z Loc [ Rs
     1
  3:
;EC is then calculated by multiplying the reciprocal of resistance,
;which is conductance, by the cell constant.
NOTE: The cell constant (Kc) is printed on the label of each sensor or it can be calculated
(see Section 6.4). It is entered in place of nnn below.
22: Z=1/X (P42)
 1: 1
                X Loc [ Rs
 2: 2
               Z Loc [one_ovrRs]
23: Z=X*F (P37)
                X Loc [ one_ovrRs ]
 1: 2
  2: nnn
                                                Enter cell constant.
  3:
                Z Loc [Ct
     3
                              ]
                                                                                    (cont.)
```

**Temperature**: Temperature is measured with a single instruction, P11, that measures the thermistor resistance and calculates temperature. Output is °C when a multiplier of 1 and an offset of 0 is used. See Section 10 of datalogger manual for detailed information on the function of Instruction P11.

```
24: Temp (107) (P11)
                Reps
  1:
     1
  2:
     3
                SE Channel
  3:
     2
                Excite all reps w/E2
     4
                Loc [ Temp_degC ]
  4:
  5:
     1.0
                Mult
  6:
     0.0
                Offset
                                                                                     (cont.)
```

#### 5.3 Correction of Ionization Errors in EC Measurement

Ionization caused by the excitation of the EC sensor can cause large errors. Campbell Scientific has developed a linear correction for conductivity between 0.005 and 0.44 mS cm<sup>-1</sup>, and a quadratic correction for conductivity between 0.44 and 7.0 mS cm<sup>-1</sup>. Corrections were determined in standard salt solutions containing KCl, Na<sub>2</sub>SO<sub>4</sub>, NaHCO<sub>3</sub>, and NaCl.

The following program segment automatically chooses which correction to apply to the measurement.

```
;The following program set corrects for errors of ionization in the EC
:measurement.
25: IF (X<=>F) (P89)
     3
  1:
               X Loc [ Ct
  2:
     4
               <
               F
  3:
     .474
  4:
    30
               Then Do
     26: Z=X*F (P37)
       1: 3
                    X Loc [Ct
       2: .95031
                    Z Loc [ Ct
       3: 3
     27: Z=X+F (P34)
       1: 3
                    X Loc [ Ct
       2: -.00378
                    F
       3: 3
                    Z Loc [Ct
28: Else (P94)
     29: Polynomial (P55)
       1: 1
                    Reps
       2:
          3
                    X Loc [ Ct
       3: 3
                    F(X) Loc [Ct
       4: -.02889
                    C0
       5: .98614
                    C1
       6: .02846
                    C2
       7:
           .000000 C3
           .000000 C4
       8:
          .000000 C5
30: End (P95)
                                                                               (cont.)
```

## 5.4 Correction of Temperature Errors

The effect of temperature on the sample solution can cause large errors in the EC measurement. A simple method of correcting for this effect is to assume a linear relationship between temperature and EC. This method generally produces values to within 2% to 3% of a measurement made at 25°C.

The best corrections are made when the temperature coefficient is determined at a temperature near field conditions. See Section 9 for details on how to determine the temperature coefficient. If determining the temperature coefficient is not possible, use a value of 2%/°C as a rough estimate.

The following program segment implements a previously determined temperature coefficient (TC) and calculates the corrected conductivity.

```
;This next program set will correct errors in the EC measurement resulting
;from temperature differences.
31: Z=X+F (P34)
 1:
               X Loc [ Temp_degC ]
 2:
     -25
 3: 6
               Z Loc [ A
32: Z=X*F (P37)
               X Loc [ Ct
 1: 3
 2: 100
  3: 7
               Z Loc [ Ct100 ]
33: Z=X*F (P37)
 1: 6
               X Loc [ A
 2: nnn
                                             Enter TC (%/°C) to correct cond. reading.
               Z Loc [ TC_Proces ]
  3: 8
34: Z=X+F (P34)
               X Loc [TC_Proces]
 1: 8
 2: 100
               Z Loc [TC_Proces]
 3: 8
35: Z=X/Y (P38)
               X Loc [ Ct100 ]
 1: 7
               Y Loc [TC Proces]
 2: 8
  3: 9
               Z Loc [ C25mScm_l ]
                                             EC corrected for temperature.
                                                                                (cont.)
```

# 5.5 Output Processing

Over large ranges, EC is not linear and is best reported as samples using instruction P70. In limited ranges, averaging (P71) measurements over time may be acceptable. Convention requires that the temperature at the time of the measurement be reported.

```
Output processing, convention states that the temperature be reported;
;with the EC measurement.
36: Do (P86)
               Set Output Flag High (Flag 0)
 1: 10
37: Sample (P70)
               Reps
 1: 1
 2:
     3
               Loc [Ct
                          1
38: Sample (P70)
 1: 1
               Reps
 2: 4
               Loc [ Temp_degC ]
39: Sample (P70)
 1: 1
               Reps
 2: 9
               Loc [ C25mScm_l]
                                                                                (cont.)
```

\*Table 2 Program
02: 0.0 Execution Interval (seconds)

\*Table 3 Subroutines

# 6. Calibration

**End Program** 

#### 6.1 Conversion Factors

1 S (Siemens) = 1 mho = 1/ohm

Although mS·cm<sup>-1</sup> and  $\mu$ S·cm<sup>-1</sup> are the commonly used units of EC, the SI base unit is S·m<sup>-1</sup>. The result of the example programs is mS·cm<sup>-1</sup>

(End)

EC measurements can be used to estimate dissolved solids. For high accuracy, calibration to the specific stream is required. However, for rough estimates, values between 550 and 750 mg·l<sup>-1</sup> / mS·cm<sup>-1</sup> are typical with the higher values generally being associated with waters high in sulfate concentration (USGS Water-Supply Paper #1473, p. 99). A common practice is to multiply the EC in mS·cm<sup>-1</sup> by 500 to produce ppm or mg·l<sup>-1</sup>.

## 6.2 Typical Ranges

Single distilled water will have an EC of at least 0.001 mS·cm<sup>-1</sup>. ECs of melted snow usually range from 0.002 to 0.042 mS·cm<sup>-1</sup>. ECs of stream water usually range from 0.05 to 50.0 mS·cm<sup>-1</sup>, the higher value being close to the EC of sea water (USGS Water-Supply Paper 1473, p. 102).

# 6.3 Factory Calibration

The CS547A is shipped with a cell constant calibrated in a 0.01 molal KCl solution at  $25.0^{\circ}$ C  $\pm 0.05^{\circ}$ C. The solution has a EC of 1.408 mS cm<sup>-1</sup>.

#### 6.4 Field Calibration

The cell constant is a dimensional number expressed in units of cm<sup>-1</sup>. The unit cm<sup>-1</sup> is slightly easier to understand when expressed as cm·cm<sup>-2</sup>. Because it is dimensional, the cell constant as determined at any one standard, will change only if the physical dimensions inside the CS547A probe change. Error due to thermal expansion and contraction is negligible. Corrosion and abrasion, however, have the potential of causing significant errors.

A field calibration of the CS547A cell constant can be accomplished as follows:

1. Make a 0.01 molal KCL solution by dissolving 0.7456 g of reagent grade KCl in 1000 g of distilled water, or purchase a calibration solution.

- 2. Clean the probe thoroughly with the black nylon brush shipped with the CS547A and a small amount of soapy water. Rinse thoroughly with distilled water, dry thoroughly, and place in the KCl solution.
- 3. Connect the CS547A and A547 or probe and interface to the datalogger using the wiring described in Section 4. Enter the following program into the datalogger.

The calibration solution temperature must be between 1°C and 35°C; the polynomial in step 11 (P58) corrects for temperature errors within this range. The solution constant of 1.408 mS cm<sup>-1</sup> (for prepared solution mentioned above), entered in step 13 (P37), is valid only for a 0.01 molal KCl solution. Location 8 [Kc (cm-1)], generated by step 14, will contain the resultant cell constant.

```
01: AC Half Bridge (P5)
 01:
               1
                        Rep
  02:
             15
                        2500 mV fast Range (5000 mV fast for 21X)
  03:
              2
                        IN Chan
  04:
               1
                        Excite all reps w/EXchan 1
  05:
           2500
                        mV Excitation (5000 mV for 21X)
  06:
               1
                        Loc [Rs
                                    1
  07:
               1
                        Mult
 08:
               0
                        Offset
02: BR Transform Rf[X/(1-X)] (P59)
 01:
               1
                        Rep
  02:
               1
                        Loc [Rs
  03:
               1
                        Multiplier (Rf)
03: Z=F (P30)
 01:
            nnn
                        F
                                                Enter Cable Length in Feet
  02:
             00
                        Exponent of 10
  03:
               5
                        Loc [Rp
04: Z=X*F (P37)
 01:
                        Loc [Rp
                                   ]
                .00032 F
  02:
               5
  03:
                        Loc [Rp
                                    ]
05: Z=X*F (P37)
                        Loc [Rp
                                   ]
 01:
               5
  02:
               -.1
  03:
               5
                        Loc [Rp
                                    ]
06: Z=X+F (P34)
 01:
               5
                        Loc [Rp
                                   ]
  02:
               -.005
                        Loc [Rp
  03:
               5
07: Z=X+Y (P33)
 01:
                        X Loc [Rs
               1
  02:
               5
                        Y Loc Rp
                                     ]
  03:
               1
                        Z Loc [Rs
                                     ]
                                                                                     (cont.)
```

```
08: Temp 107 Probe (P11)
 01:
                       Rep
              1
                       IN Chan
 02:
              3
              2
                       Excite all reps w/EXchan 2
 03:
              2
 04:
                       Loc [t
 05:
              1
                       Mult
              0
                       Offset
 06:
09: Z=X+F (P34)
 01:
                       X Loc [t
            -25
 02:
 03:
              3
                       Z Loc [T25_01]
10: Z=X*F (P37)
 01:
              3
                       X Loc [T25_01]
 02:
               .01
 03:
              3
                       Z Loc [T25_01]
11: Polynomial (P55)
 01:
                       Rep
              1
 02:
              3
                       X Loc [T25_01]
 03:
                       F(X) Loc [f_of_T
              4
 04:
               .99124 C0
 05:
             -1.8817
                       C1
 06:
              3.4789
                       C2
 07:
             -3.51
                       C3
 08:
             -1.2
                       C4
 09:
            -43
                       C5
12: Z=1/X (P42)
                       X Loc [f of T
 01:
              6
 02:
                       Z Loc [one_ovrfT
13: Z=X*F (P37)
 01:
              6
                       X Loc [one_ovrfT
                                               EC of calibration solution
 02:
              1.408
 03:
              7
                       Z Loc [Conductiv]
14: Z=X*Y (P36)
 01:
                       X Loc [Conductiv]
 02:
              1
                       Y Loc [Rs
 03:
              8
                       Z Loc [Kc
                                                                                     End
```

# 7. Maintenance

Routine maintenance includes thoroughly cleaning the orifice of the CS547A probe with the black nylon brush provided and a little soapy water. Rinse thoroughly.

# 8. Analysis of Errors

## 8.1 EC Measurement Error

1. Bridge Measurement Error: < 1.0%

2. Calibration Error: bridge measurement: < 0.5% calibration solution: < 1.0%

3. Ionization Error of KCl and Na+ Solutions After Correction: < 2.0%, 0.45 to 7.0 mS cm<sup>-1</sup> < 8.0%, 0.005 to 0.45 mS cm<sup>-1</sup>

**Correction of Ionization Errors**: Figures 8.1-1 and 8.1-2 show the amount of correction applied by the example program to compensate for ionization effects on the measurements. Also shown is an ideal correction. Factors were derived by measuring the standard solutions described in Section 2.2 with values of 0.0234, 0.07, 0.4471, 07, 1.413, 2.070, 3.920, and 7.0 mS cm<sup>-1</sup>.

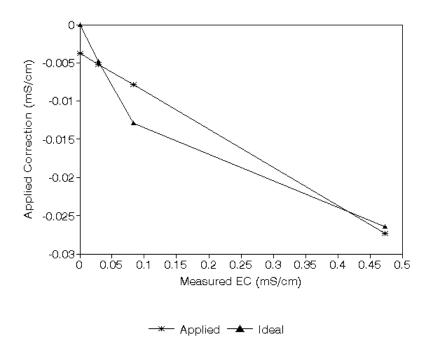


FIGURE 8.1-1. Plot of Ideal and Actual Correction between 0 and 0.44 mS cm<sup>-1</sup>

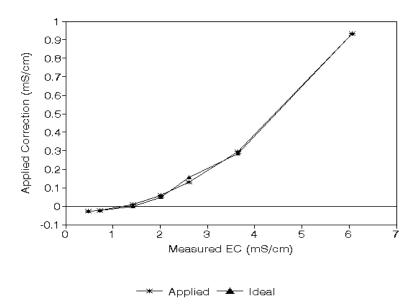


FIGURE 8.1-2. Plot of Ideal and Actual Correction between 0.44 and 7.0 mS cm<sup>-1</sup>

## 8.2 Temperature Measurement Error

The overall probe accuracy is a combination of the thermistor's interchangeability specification, the precision of the bridge resistors, and the polynomial error. In a "worst case" all errors add to an accuracy of  $\pm 0.4^{\circ}$ C over the range of  $-24^{\circ}$  to  $48^{\circ}$ C and  $\pm 0.9^{\circ}$ C over the range of  $-38^{\circ}$ C to  $53^{\circ}$ C. The major error component is the interchangeability specification of the thermistor, tabulated in Table 8.2-1. For the range of  $0^{\circ}$  to  $50^{\circ}$ C the interchangeability error is predominantly offset and can be determined with a single point calibration. Compensation can then be done with an offset entered in the measurement instruction. The bridge resistors are 0.1% tolerance with a 10 ppm temperature coefficient. Polynomial errors are tabulated in Table 8.2-2 and plotted in Figure 8.2-1.

TABLE 8.2-1. Thermistor Interchangeability Specification Temperature			
Temperature (°C)	Tolerance (±°C)		
-40	0.40		
-30	0.40		
-20	0.32		
-10	0.25		
0 to +50	0.20		

<b>TABLE 8.2-2.</b>	Polynomial Error
-40 to +56	<±1.0°C
-38 to +53	<±0.5°C
-24 to +48	<±0.1°C

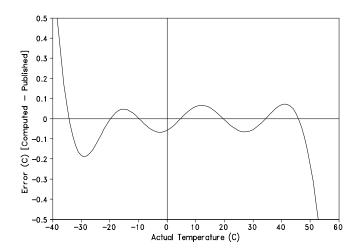


FIGURE 8.2-1. Error Produced by Polynomial Fit to Published Values

# 9. Deriving a Temperature Compensation Coefficient

- 1. Place the CS547A in a sample of the solution to be measured. Bring the sample and the probe to 25°C.
- Enter the example program from Section 5.2 in the datalogger and record C<sub>1</sub> at 25°C from Location 3. This number will be C<sub>25</sub> in the formula in Step 4.
- Bring the solution and the probe to a temperature (t) near the temperature at which field measurements will be made. This temperature will be t (in °C) in the formula. Record C<sub>t</sub> at the new temperature from Location 3. This number will be C in the formula in Step 4.
- 4. Calculate the temperature coefficient (TC) using the following formula.

$$TC = 100*\frac{(C - C_{25})}{(t - 25)*C_{25}} = \%/^{\circ}C$$

Enter TC in the appropriate location (nnn) as shown in the program segment in Section 5.4.

# 10. Instruction 11 Details

Understanding the details in this section are not necessary for general operation of the CS547A probe with CSI's dataloggers.

Instruction 11 outputs a precise 2 VAC excitation (4 V with the 21X) and measures the voltage drop due to the sensor resistance. The thermistor resistance changes with temperature. Instruction 11 calculates the ratio of voltage measured to excitation voltage (Vs/Vx) which is related to resistance, as shown below:

 $V_s/V_x = 1000/(R_s+249000+1000)$ 

where Rs is the resistance of the thermistor.

See the measurement section of the datalogger manual for more information on bridge measurements.

Instruction 11 then calculates temperature using a fifth order polynomial equation correlating Vs/Vx with temperature. The polynomial coefficients are given in Table 10-2. The polynomial input is (Vs/Vx)\*800. Resistance and datalogger output at several temperatures are shown in Table 10-1.

TABLE 10	-1. Temperature , R	esistance, and		
	Datalogger Output			
0.00	351017	-0.06		
2.00	315288	1.96		
4.00	283558	3.99		
6.00	255337	6.02		
8.00	230210	8.04		
10.00	207807	10.06		
12.00	187803	12.07		
14.00	169924	14.06		
16.00	153923	16.05		
18.00	139588	18.02		
20.00	126729	19.99		
22.00	115179	21.97		
24.00	104796	23.95		
26.00	95449	25.94		
28.00	87026	27.93		
30.00	79428	29.95		
32.00	72567	31.97		
34.00	66365	33.99		
36.00	60752	36.02		
38.00	55668	38.05		
40.00	51058	40.07		
42.00	46873	42.07		
44.00	43071	44.05		
46.00	39613	46.00		
48.00	36465	47.91		
50.00	33598	49.77		
52.00	30983	51.59		
54.00	28595	53.35		
56.00	26413	55.05		
58.00	24419	56.70		
60.00	22593	58.28		

TABLE 10-2. Polynomial Coefficients		
COEFFICIENT	VALUE	
C0	-53.4601	
C1	9.08067	
C2	-8.32569 x 10 <sup>-01</sup>	
C3	5.22829 x 10 <sup>-02</sup>	
C4	-1.67234 x 10 <sup>-03</sup>	
C5	2.21098 x 10 <sup>-05</sup>	

# 11. Electrically Noisy Environments

AC power lines can be the source of electrical noise. If the datalogger is in an electronically noisy environment, the 107/107B temperature measurement should be measured with the AC half bridge (Instruction 5) with the 60 Hz rejection integration option on the CR10(X) and slow integration on the 21X and CR7 (see Section 13 of the datalogger manual for more information on noise). Instruction 11's fast integration will not reject 60 Hz noise.

Example 2. Sample CR10(X) Instructions Using AC Half Bridge

```
01: AC Half Bridge (P5)
 01:
               1
             22**
  02:
                        7.5 mV 60 Hz rejection Range
               9*
  03:
                        IN Chan
               3*
  04:
                        Excite all reps w/EXchan 3
           2000**
  05:
                        mV Excitation
  06:
             11*
                        Loc [ Air_Temp ]
            800
  07:
                        Mult
                        Offset
  08:
               0
02: Polynomial (P55)
 01:
               1
                        Rep
             11*
                        X Loc [ Air_Temp ]
  02:
  03:
             11*
                        F(X) Loc [ Air_Temp ]
  04:
             -53.46
                        C<sub>0</sub>
  05:
             90.807
                        C1
  06:
             -83.257
                        C2
  07:
             52.283
                        C3
  08:
            -16.723
                        C4
 09:
               2.211
                        C5
 Proper entries will vary with program and datalogger channel and input location
  assignments.
 On the 21X and CR7 use the 15 mV input range and 4000 mV excitation.
```

# 12. Long Lead Lengths Temperature

If the CS547A has lead lengths of more than 300 feet, use the DC Half Bridge instruction (Instruction 4) with a 2 millisecond delay to measure temperature. The delay provides a longer settling time before the measurement is made. Do

not use the CS547A with long lead lengths in an electrically noisy environment.

**Example 3. Sample Program CR10 Using DC Half Bridge with Delay** 

```
01: Excite, Delay, Volt(SE) (P4)
 01:
              1
                       Rep
 02:
              2**
                       7.5 mV slow range
              9*
 03:
                       IN Chan
 04:
              3*
                       Excite all reps w/EXchan 3
 05:
              2
                       Delay (units .01sec)
          2000**
 06:
                       mV Excitation
             11*
 07:
                       Loc [ Temp_C ]
               .4***
 08:
                       Mult
 09:
              0
                       Offset
02: Polynomial (P55)
 01:
              1
                       Rep
                       X Loc Temp C
 02:
             11*
 03:
             11*
                       F(X) Loc [ Temp_C ]
 04:
            -53.46
                       C0
 05:
             90.807
                       C1
 06:
            -83.257
                       C2
 07:
             52.283
                       C3
 08:
            -16.723
                       C4
 09:
              2.211
                       C5
   Proper entries will vary with program and datalogger channel and input location
   assignments.
   On the 21X and CR7 use the 15 mV input range and 4000 mV excitation.
   Use a multiplier of 0.2 with a 21X and CR7.
```

# 13. CS547A Schematic

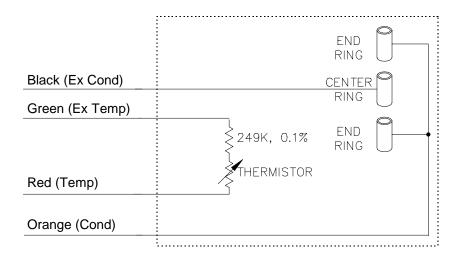


FIGURE 13-1. CS547A Conductivity and Temperature Circuit Diagram

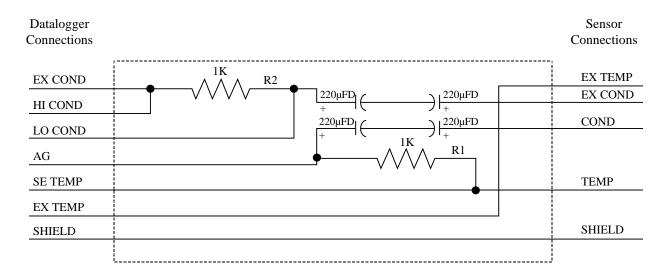


FIGURE 13-2. A547 Interface Circuit Diagram